

 
TV ANTI-TIP KIT

INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE INSTALLING

Caution: This product is not a substitute for parental supervision. Manufacturer assumes no responsibility or liability for improper installation or excessive loads placed on any of the supplied components.

The Kit includes two each of 5mm, 6mm & 8mm bolts.



5MM




6MM



8MM




Flat screen TV sets have 4 metal inserts located on the backside. Use the upper 2 for best results. If your TV has bolts already included then they are correct and should be used. If bolts are not included then select a pair from the hardware kit. Test fit by hand to be sure the bolt installs completely without resistance. If the bolt will not insert all the way, then you need to add washers to prevent damage to your TV.

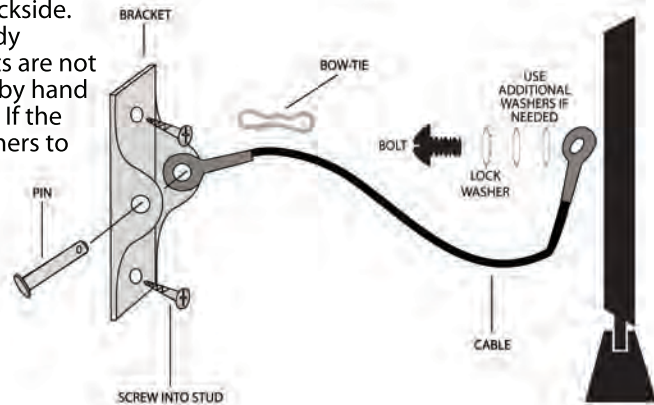

STEP 1: Locate studs on the wall and attach wall brackets vertically

STEP 2: Install Cable to the back of the TV using the bolts supplied by the TV manufacturer. If no bolts were provided, use appropriate bolt included in the kit.

STEP 3: Attach Cable to the wall bracket using provided pin and Bow-Tie. Insert cable inside wall bracket and push pin through both. Use Bow-Tie to lock it in place.

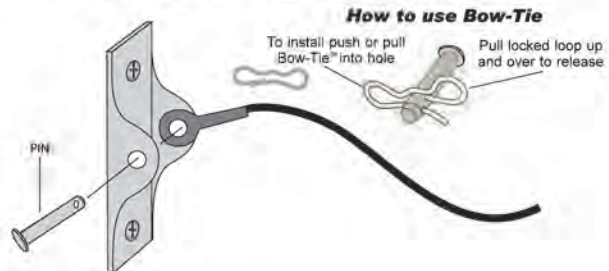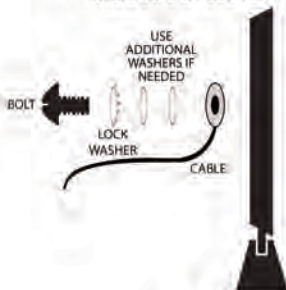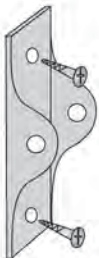

Note: If the length of the cable is too long for your application simply tie a knot in the cable to shorten it. This will not reduce cable strength.



Warranty: To be effective this product must be used in accordance with the instructions. Failure to follow the instructions will void all warranties. Specifically it must be attached to studs on the wall. Consumer assumes all responsibility for product use and any risks or damage. Neither seller nor manufacturer will be liable for injury, loss or damage from inappropriate installation of TV Anti-Tip Kit. Hangman is warranted against defects. Hangman Products will replace any broken or defective unit. No other warranties are offered or implied.