

Item No.: 836.21.351

CLOSET SAFE

SPECIFICATIONS:

Weight: 31 lbs.

Width: 16"

Depth: 13" (Including Keypad)

Height: 11-7/8"

INSIDE DIMENSIONS:

Width: 15-1/2"

Depth: 10"

Height: 11-1/2"



NOTE

The Safe Ships with a set of "Emergency Keys" used to gain access to safe if locked out. DO NOT place these emergency keys inside the safe!

FEATURES:

- Designed to fit within 18" wide opening
- Electronic Keypad lock with 3-6 Digit Code
- Motorized Locking Bolts
- Emergency Keys (2) allow access if battery or code is lost
- Master Code Option
- Mounting holes provided to anchor securely to wall or shelf
- Steel Thickness: Safe Body 2 mm, Safe Door 4 mm
- Four (4) AA Batteries Required (Not Included)
- Black Powder Coated Finish

VALUED CUSTOMER,

Thank you for choosing our Closet Safe! You've taken an important step in organizing and protecting your most valued possessions within your Closet. This safe is professionally made and designed to provide safety. Please take time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.

BATTERY

- The working voltage for the product is equal to 4 AA batteries (Not Included).
- System will turn into micro power consuming state automatically.

TEST BATTERY VOLTAGE

Press the “#” key, if the display reads “BA—H”, it means the batteries are normal; if the displays reads “BA—L”, it means the voltage are low and must be replaced as soon as possible.

CAUTION

When replacing batteries, replace ALL the batteries at once and never use or mix old and fresh batteries together.

SETTING THE PERSONAL CODE

- Enter the factory default code 1 2 3 4 the LCD display will indicate “opened”.
- With door opened, enter any 3-6 digit code you wish to change code to be.
- Press “***”, screen displays “CLOSED”, which means the door is closed.
- The screen will show the new code entered, which means your new code has been accepted
- You can now open the door by your new code.

SETTING THE MASTER CODE

- Press “***” when the door is open, the display reads “PROG”.
- After “PROG” disappears, enter preset master code (The factory master code of hotel mode is “011223”) and reading “NEW”.
- After “NEW” disappears, input your new code (6 digits) within 5 seconds, the display will read “AGAIN”.
- After “AGAIN” disappears, input your new code (6 digits) again within 5 seconds, then the display reads “DONE”.
- New master code setting is successful, if the display reads “ERROR” process will need to be restarted

SECURITY FUNCTION:

HIDE THE CODE WHEN TYPING

Press “*” before enter code, and the display will NOT show your CODE as you type it and will not show/display back the code you entered when the door locked.

AUTOMATIC LOCK (DELAY)

After four (4) consecutive times of error codes, the system will be locked out automatically. During that time, the display will display “HOLD15” every press. 15 minutes later, the system will start again, allowing keypad entry.

OPENING THE SAFE WITH “EMERGENCY KEYS”

If the electronic lock circuit has malfunctioned, or battery is dead, or codes unknown. You can open the safe using the Emergency Keys supplied.

- Open the black plastic cap on the front of the safe (door)
- Insert the emergency key and turn clockwise to OPEN

Note

If you have LOST The Emergency Keys Contact Reseller where safe was purchased for other options.

ERROR INDICATION

When screen displays the following indications, it means there are errors. Please operate according to the following instructions.

- ERROR—means the code is incorrect and you need to enter correct code.
- ERROR1—means the door can not be open normally, and the bolt is blocked. Please push the door slightly to loosen the bolt.
- ERROR2— when the locking bolts are blocked preventing them from extending. Remove obstruction and lock door.

HÄFELE

3901 Cheyenne Drive • Archdale, NC 27263
1-800-423-3531 • www.hafele.com/us