


Hook Mounting Instructions

Side Panel Mounting Instructions

1. Place bracket onto side panel with Fixed End Cap facing the back
2. Move Hooks so that Side Panel Mounting Holes are visible.
3. Attach to Side Panel using 20mm Euro Screws (supplied) or #8 wood screw (customer supplied)
4. Slide Hooks back into Position.
5. Press Front End Cap into place.

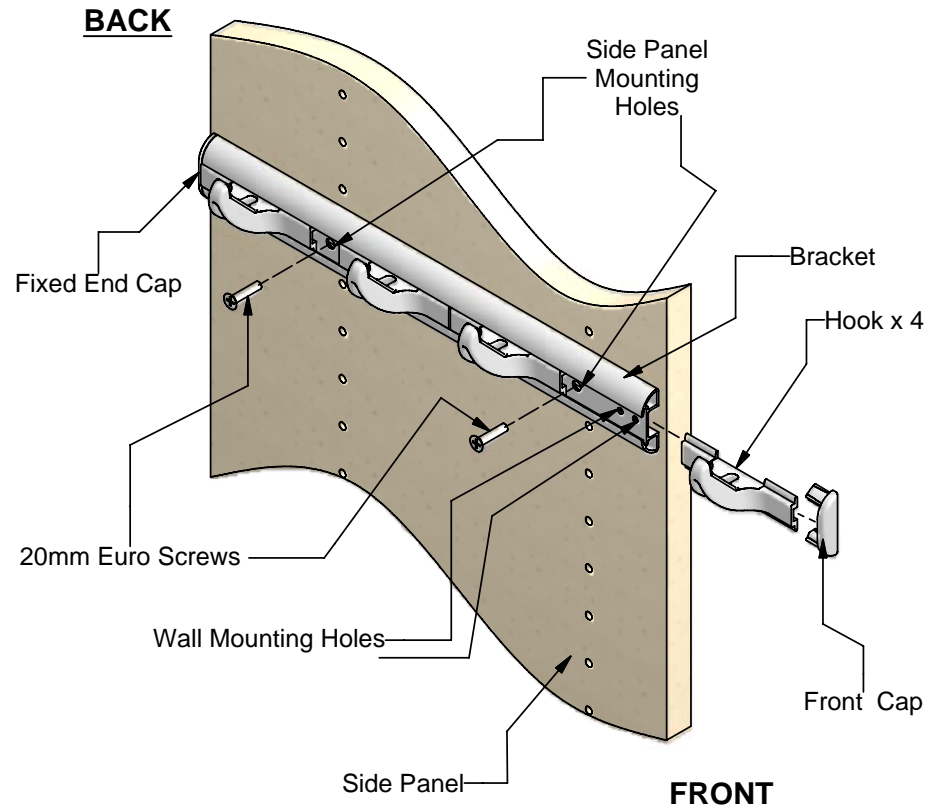

Wall Mounting Instructions

1. Move Hooks so that Wall Mounting Holes are visible
2. Attach Bracket via Wall Mounting Holes
3. Attach to Stud if possible. If Stud can not be located, use a wall anchor, such as the E-Z Anchor (Hafele Art.#.051.18.034) with No.8 X 1.5" wood screw.

