



**APPLICATIONS:** Use model 1029 whenever a center mount, three-quarter extension slide is required. Use for kitchen, bath, and residential applications.

Center Mount 35 lb.\*\* [16 kg.] Capacity 3/4 Extension

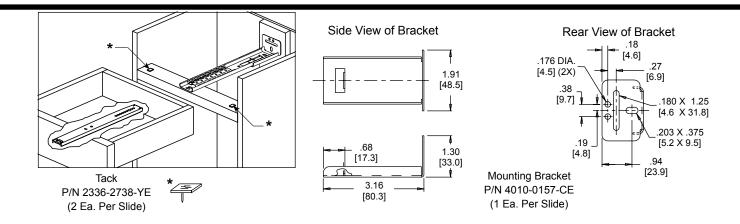

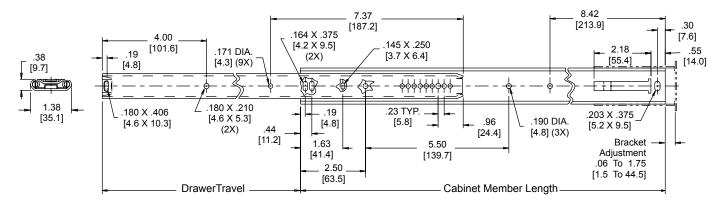

Part

Number

1029-113

1029-115

1029-117

1029-119

1029-121

1029-123

1029-125

1029-127

Fits Drawer

Lengths

10-5/8" to 12-1/2"

[269.9 to 317.5]

12-5/8" to 14-1/2"

[320.7 to 368.3]

14-5/8" to 16-1/2"

371.5 to 419.1]

16-5/8" to 18-1/2"

[422.3 to 469.9]

18-5/8" to 20-1/2'

[473.1 to 520.7]

20-5/8" to 22-1/2"

[523.9 to 571.5]

22-5/8" to 24-1/2"

[574.7 to 622.3]

24-5/8" to 26-1/2"

[625.5 to 673.1]

INCHES [mm]

Drawer

Travel

8-1/2"

[215.9]

10-1/2"

[266.7]

12"

[304.8]

12-1/2"

[317.5]

15"

[381.0]

16-1/2"

[419.1]

17-1/2"

[444.5]

19-1/2"

[495.3]

Cabinet

Member

Lengths

12-7/8"

[327.0]

14-7/8"

[377.8]

16-7/8"

[428.6]

18-7/8"

[479.4]

20-7/8"

[530.2]

22-7/8"

[581.0]

24-7/8"

[631.8]

26-7/8"

[682.6]

Fits Cabinet

**Depths** 

13" to 14-1/2"

[330.2 to 368.3]

15" to 16-1/2"

[381.0 to 419.1]

17" to 18-1/2"

[431.8 to 469.9]

19" to 20-1/2"

[482.6 to 520.7]

21" to 22-1/2"

[533.4 to 571.5]

23" to 24-1/2"

[584.2 to 622.3]

25" to 26-1/2"

[635.0 to 673.1]

27" to 28-1/2"

[685.8 to 723.9]

**Finish** Bright electro-zinc (C) or black zinc (CB)

plating available

**Length** 13" to 27" [330mm to 686mm]

Travel See chart

**Load** 35 Lbs.\*\* [16 kg.]

**Disconnect** Front friction disconnect

Hardware #8 slotted pan or slotted binding head

screws

**Movement** Steel ball bearings

Ordering Instructions

Measure the drawer from the rear of the front panel to the rear of the back of the drawer. Using the drawer measurement, select slide from chart at right. Measure

your cabinet depth and check it against tabulation for selected slide.

Example: 17" [432mm] long drawer with 20" [508mm] cabinet, zinc finish, order

C1029-119.

Features Optional rear mounting bracket adjusts to fit various cabinet depths.


Rear plastic socket and roller are optional and available directly from Bainbridge Manufacturing Company at (509) 745-9555.

\*\* Load rating is based on an 18" slide in a 16" wide drawer cycled 50,000 times.

2 **Installation Instructions** 


To use model 1029 center slide, the drawer side must extend below the drawer bottom 1/4" [6.4mm]. See Figure 1. It may be necessary to cut a notch in the back overhang of the drawer, allowing the slide to fully extend to the back of the cabinet.

NOTE: A shim should be used below the cabinet member to compensate for required drawer clearance. The thickness of the shim should provide sufficient clearance between the drawer bottom and bottom of the drawer side after the tacks have been installed. Example: 3/8" [9.5mm] drawer side would require a 1/8" [3.2mm] shim. See Figure 2.

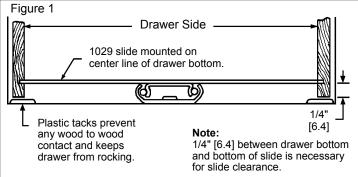

# **Drawer Member**

- 1. Open the slide and separate the drawer and cabinet members by pulling firmly through the friction resistance.
- 2. Measure and mark the center line of the drawer width and the cabinet opening. Notch drawer back as required.
- 3. Mount the drawer member (narrow member) on the under side of the drawer centerline. See Figure 3. Install a #8 pan head screw through the sloped slot so the front of the drawer member is flush with the rear of the drawer front panel. Select a hole nearest the center of the drawer back at its thickest point and install a #8 pan head screw.

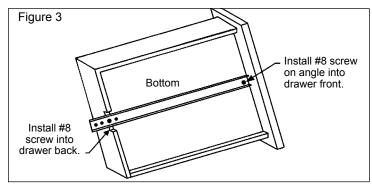

#### **Cabinet Member**


# With Rear Adjustable Bracket

4. At the rear of the cabinet, locate a point on the centerline of the cabinet opening and 13/16" above the cross rail. Install a #8 screw through the horizontal slot in the bracket. Do not tighten completely. Assemble cabinet member to the bracket and extend member to cabinet front and mount to predetermined center line of cabinet cross rail.

#### Without Rear Adjustable Bracket


If cabinet has a horizontal stringer, mount directly through holes provided. Secure #8 screws to stringer.

- 5. Install plastic headed glide tacks in front face frame so drawer sides are supported. See Figure 1.
- 6. Move the ball bearing retainer towards the front of the cabinet member until it comes to the formed stop on the member. Carefully engage the drawer member into cabinet until it is completely closed. Secure the "rear adjustable bracket" (if necessary) so the front drawer panel closes flush with the cabinet.
- 7. After all adjustments have been made, securely tighten all screws. A round hole is provided in the rear bracket to accommodate a fixing screw.

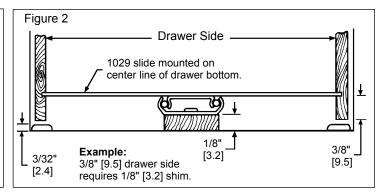

# **Slide Ordering Instructions**

Complete your order for Accuride center mount slide 1029 by specifying the following:



### **Packaging**

# Distributor (D) Pack

Polybag packaging includes 1 slide, 1 rear adjustable bracket, 2 tacks, and 5 screws. All lengths are packaged 20 each per box.

# Express (X) Pack

Slides, rear adjustable brackets, and tacks are packed in one box. All lengths are packaged 20 each per box.

# Bulk (P) Pack

Slides, rear adjustable brackets, and tacks are ordered and packaged separately. Slides may be purchased without brackets and tacks.

Lengths -113 through -119 50 each per box 40 each per box Lengths -121 Lengths -123 through -127 25 each per box

#### **Specifications**

Slide members and ball retainers: Cold rolled steel

Ball bearings: Carburized steel

RoHs Compliant

Specifications, materials, prices, terms, and delivery are subject to change without notice.



ACCURIDE INTERNATIONAL INC.

12311 Shoemaker Avenue Santa Fe Springs, CA 90670

TEL (562) 903-0200

FAX (562) 903-0208

www.accuride.com Manufacturing, Engineering, and Sales

United States • Germany • Japan • Mexico • United Kingdom • China

Copyright © 2001 Accuride International Inc. 3700-9009(1005)-MK001-R7-1011