


Xenon Low Voltage Lighting Power Tap

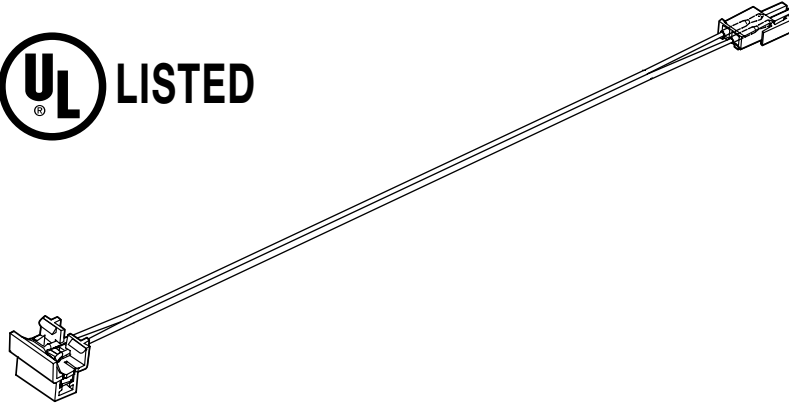


Warning: Be sure the electricity to the wires you are working on is shut off by either removing the fuse or turning the circuit breaker off.

Risk of fire: Exceeding the maximum wattage may result in overheating conductors. Read all instructions carefully. If you are unclear as to how to proceed, consult a qualified technician.


Follow the instructions supplied with transformer and accessories to install the lighting system desired.

Use class II (12 volt/60 watt maximum) Häfele America Co. transformers only.

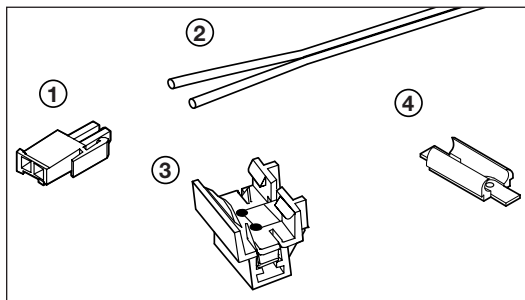


Kit contains:


1. Amp plug 2. Wire 3. Large plug 4. Clip

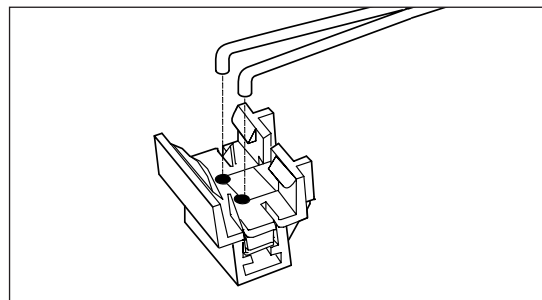

- 1.** Insert the insulated end of the wire as far as possible into the holes in the large plug as shown. Do not strip any insulation off the wire.

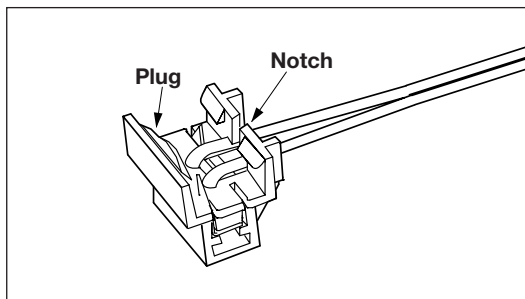


- 2.** While holding the wire in the plug, insert the wire into notch in the large plug by bending the wire and twisting the wire sideways. Tuck the wire under the tabs at the bottom of the notch.

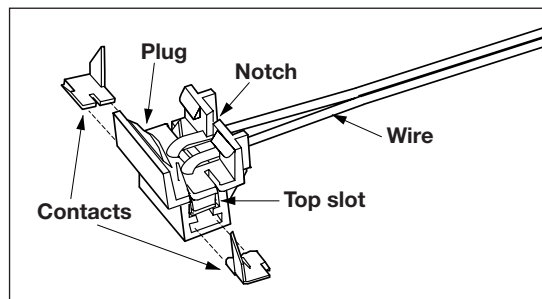


- 3.** Insert metal contact into the top slot in the end of the plug as shown. Press into place with pliers until the contact is flush with the edge of the plug. Repeat with second contact in the other end of the plug.

For use with Häfele Low Voltage Xenon Lighting for Track Attachment only.


4. Mount to cable track or cable w/o track

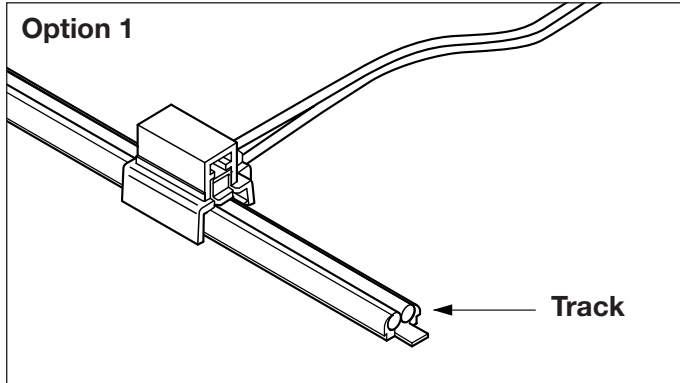

4a. Option 1. Used with cable track 824.19.320 or 824.19.720. Choose location for the plug and snap plug firmly onto cable. Discard wire clip.

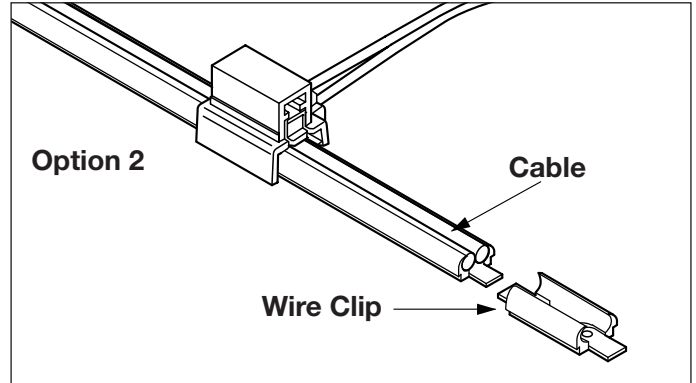


4b. Option 2. Used with cable, no track. Choose location of large plug and install wire clip with screws (not included). Position cable on wire clip and snap plug firmly onto clip.

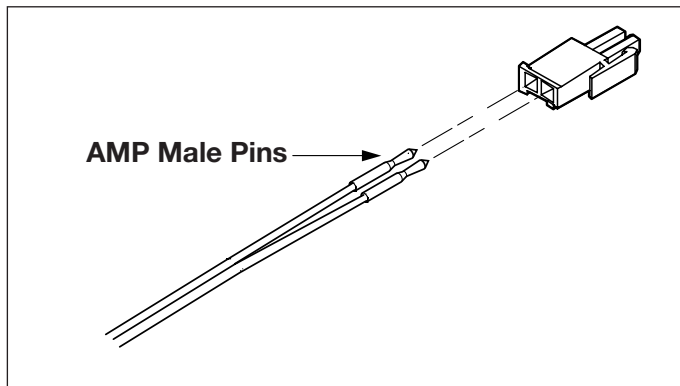

5. Insert one barbed end of wire into the amp plug, pressing firmly until seated in plug. Repeat with second barb.

Note: If desired, the wire can be passed through a smaller hole if done prior to attaching amp plug.

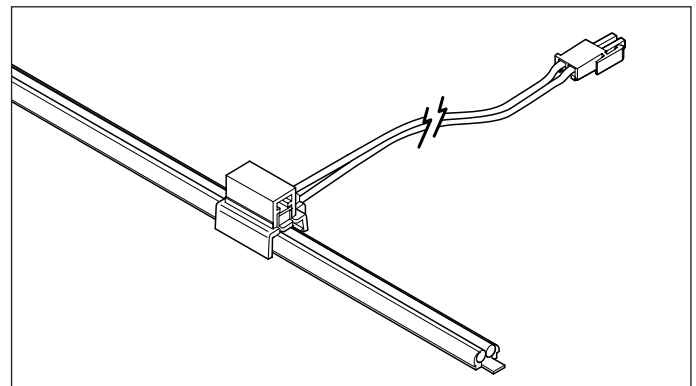

6. Finished assembly.

HÄFELE

3901 Cheyenne Drive

P.O. Box 4000

Archdale, NC 27263

1-800-423-3531

www.hafele.com