

# 3832EC

## 4 IMPORTANT INSTALLATION TIPS

**BE SURE TO REVIEW THE ENTIRE PRODUCT TECHNICAL SHEET BEFORE BEGINNING INSTALLATION.**

### 1. SIDE SPACE




**! THE SLIDES WILL NOT FUNCTION PROPERLY IF THE SIDE SPACE IS LESS THAN .50".**

Always construct drawer boxes 1 1/16" smaller than the cabinet opening.

### 2. MOUNTING HOLES

**ALWAYS USE THE CORRECT MOUNTING HOLES FOR OPTIMAL PERFORMANCE.**


**FOR FACE FRAME APPLICATIONS ONLY**

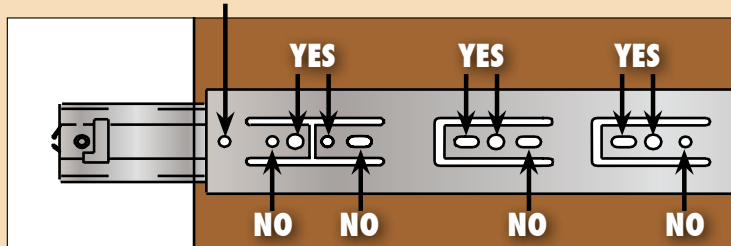

**! ALWAYS USE THE SYSTEM HOLES OR MOUNTING HOLES AT THE ENDS OF THE BREATHING TABS.**

The breathing tabs allow the slide to adapt to variances in construction and materials. If you use the hole at the base of the tab or any other non-breathing tab mounting hole, it anchors the slide member to the cabinet and does not allow the breathing tabs to do their job.


### 3. MEMBER SETBACK

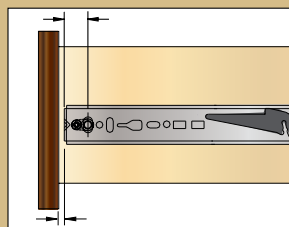

**! MAKE SURE YOU HAVE THE CORRECT SETBACK FOR THE CABINET AND DRAWER MEMBERS OR THE EASY-CLOSE MECHANISM WILL NOT ENGAGE PROPERLY.**

Always reference the technical sheet for the correct dimensions for your construction method.

### 4. SLIDE RESET

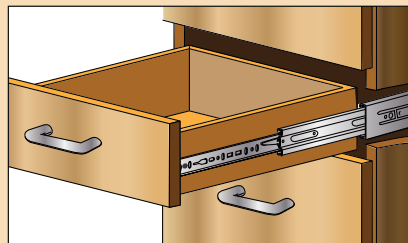

**! When inserting the drawer, first be sure the ball bearing retainers in the cabinet member are fully forward. Insert the drawer member into the cabinet member. Push the drawer in until it is completely closed; the Easy-Close mechanism will click and engage.**

**CYCLE THE DRAWER TWO OR THREE TIMES.**

WWW.ACCURIDE.COM

© 2016 Accuride International Inc. 2735-R1-0316-Alpha

**Accuride**  
Always Moving Forward