

# ORNAMENTAL PRODUCTS

---

## INSPIRED BY DESIGN

Always read the instructions completely and carefully before beginning assembly.  
Remove and check contents for damage and / or missing parts.

### Wall Organizer



545.47.212      11"D x 4-7/8"W x 26" H  
545.47.214      11"D x 7-7/8"W x 26" H

**Contents of Box:**

- 1 - Wall Organizer Pull-out, complete with Bottom Guide Rail hardware attached.
- 8 - Shelf Pins
- 1 - Hardware Kit, 4 mounting plates & 4 screws.
- 2 - Moveable Shelves
- 2 - Bumpers & Screws

**You will need:**

- Safety Glasses
- Tape Measure
- Screw Driver

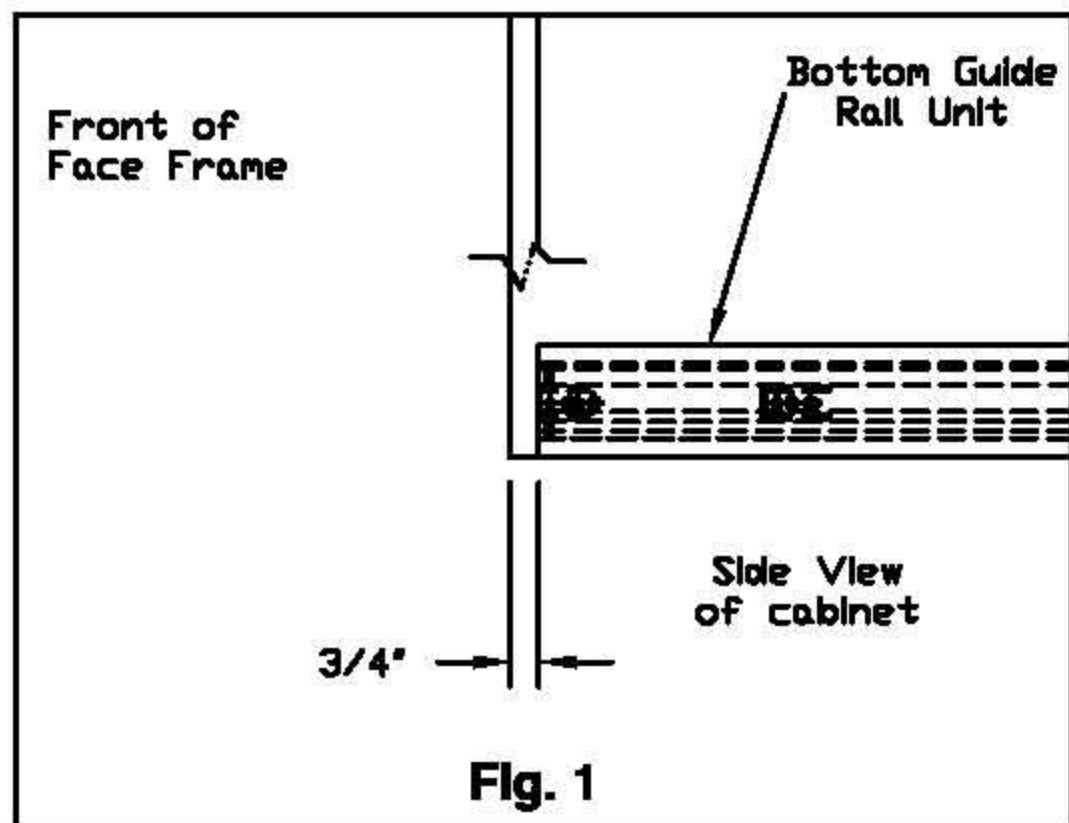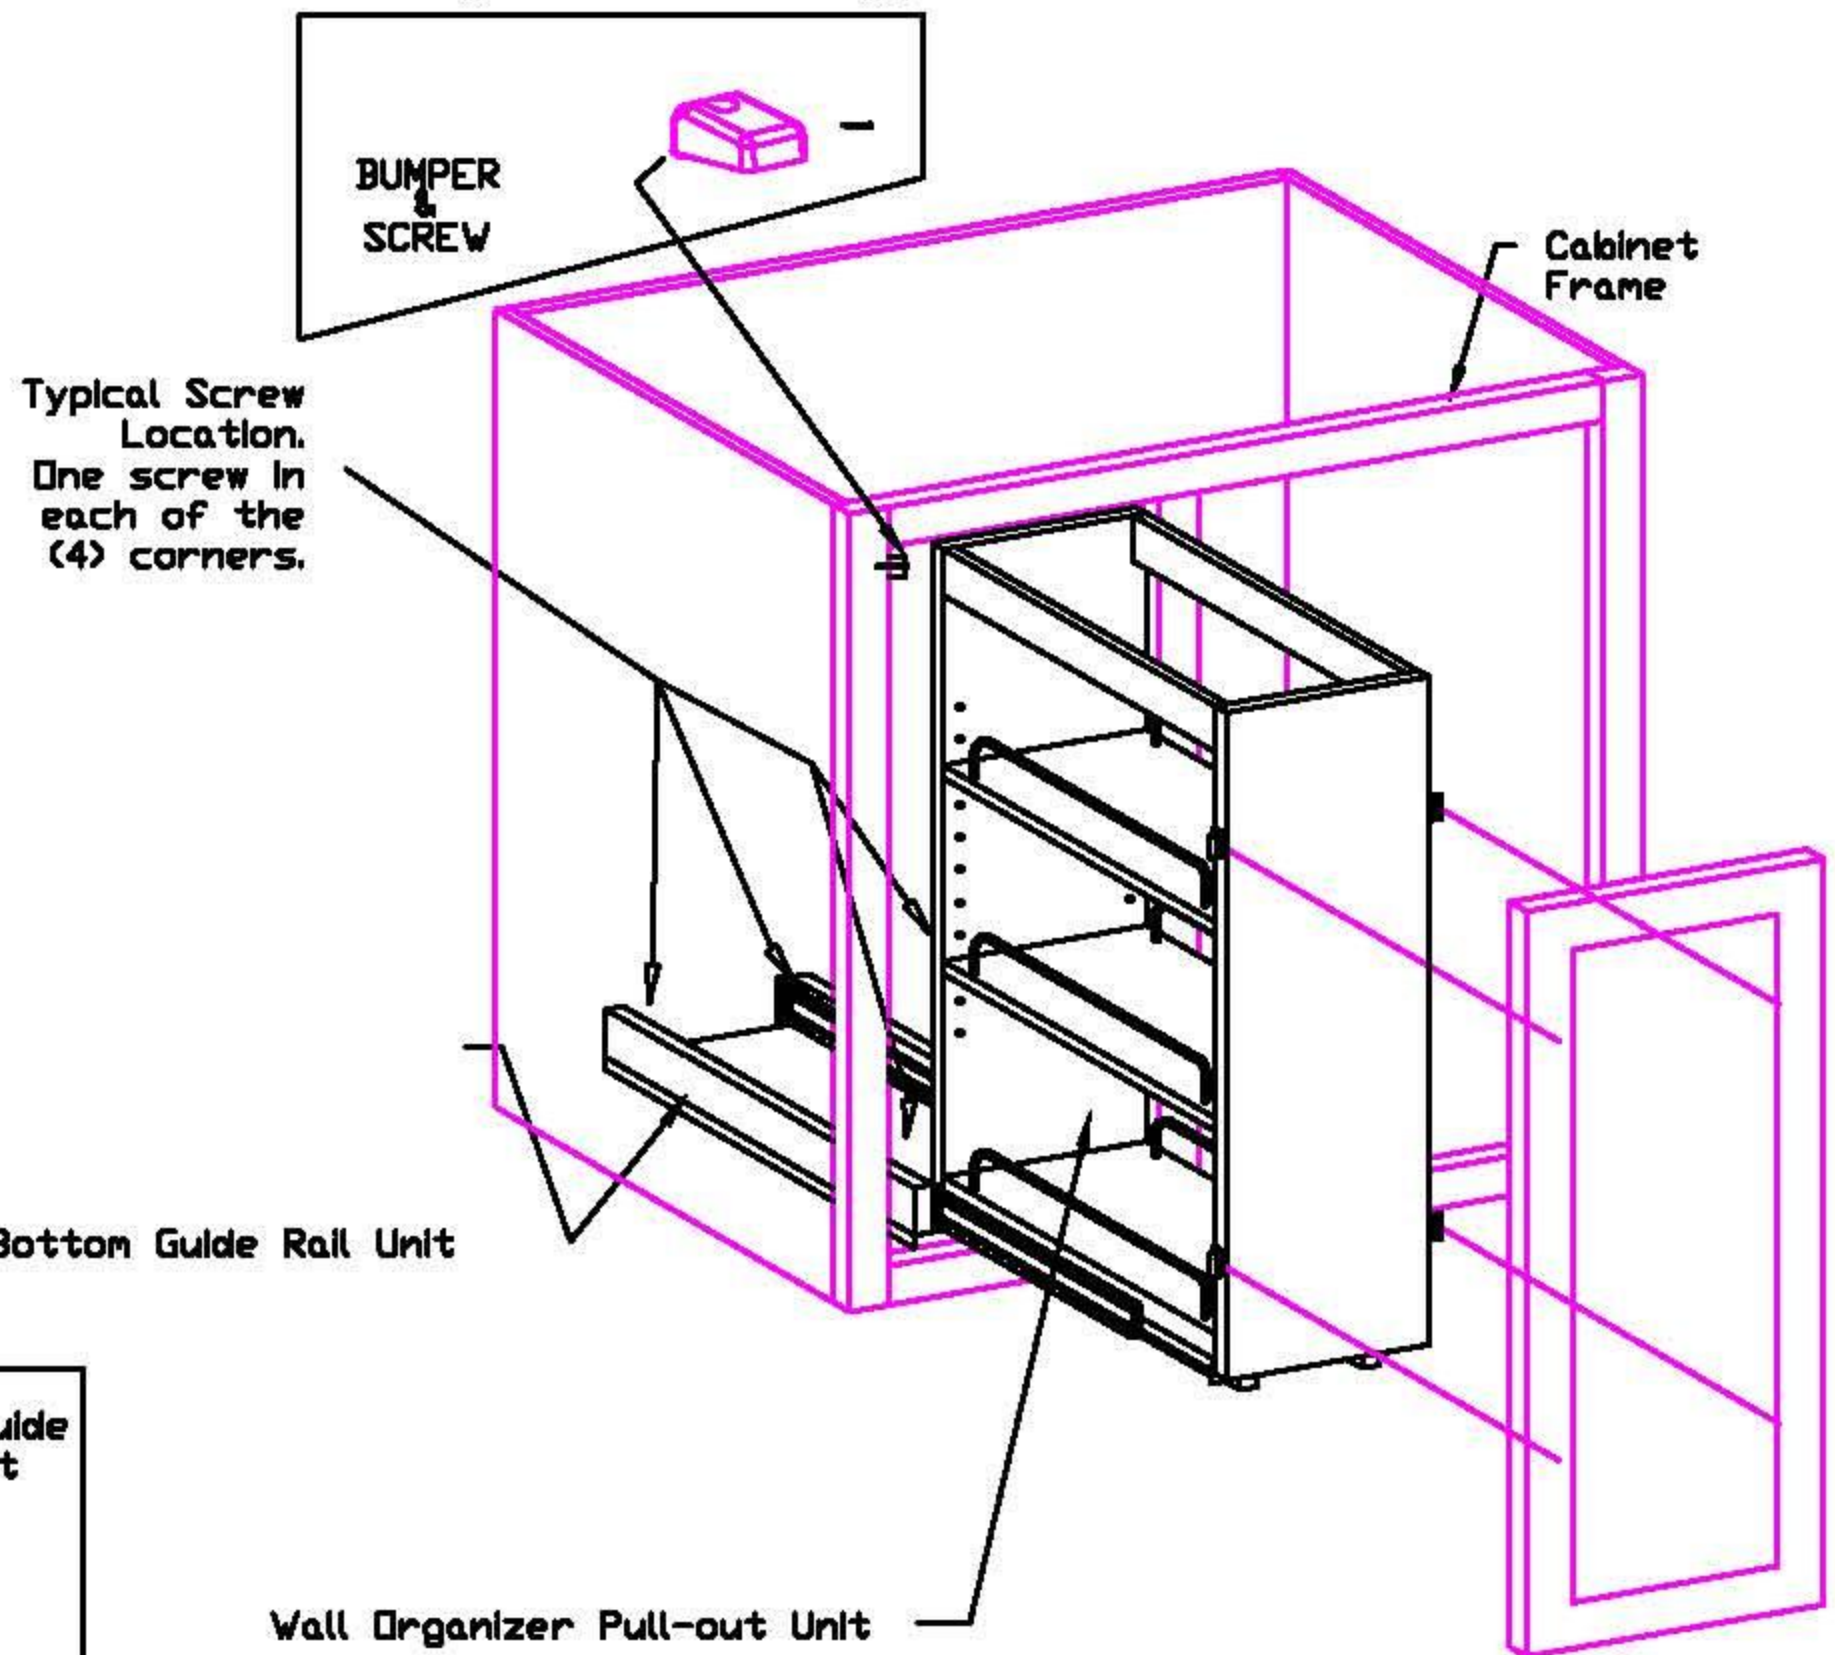

### Installation Instructions

- Step 1 Remove door from cabinet. (**IMPORTANT! This unit is designed for use with a 24" deep base cabinet.**)
- Step 2 Remove the organizer pull-out unit from the bottom guide rail unit by depressing the black release clips (one for each slide) and pull away so that the two items are separated.
- Step 3 Place the Bottom Guide Rail unit on the floor of the cabinet opening and locate the front of the Bottom Guide Rail unit 3/4" from the front of the cabinet frame. (**See figure 1**). Then center the Bottom Guide Rail unit left to right within cabinet opening and fix into position to the cabinet floor with screws (not included). (**IMPORTANT! Screw down all four corners of the Bottom Guide Rail unit.**)
- Step 4 Install the Base Organizer Pull-out unit into the Bottom Guide Rail unit, making sure that the front of the Base Organizer Pull-out unit is flush with the front of the cabinet frame.
- Step 5 **Install Bumpers to inside edge of cabinet face frame at high of top rail on pull-out one on each side**
- Step 6 Attach the cabinet door to the Base Organizer Pull-out unit using the mounting plates making sure that the door is centered to the cabinet. (**IMPORTANT! Use caution on your fastener length so it does not protrude through the face of the door.**)

For more information on additional products offered by Ornamental Products, visit our website at.....



**ornamental products**  
www.omaprod.com